

Using your Olympus WS-100

The Hold button (on the back). When this button is DOWN, it means that you can make recordings, erase files, etc. When this button is UP, it is as though the WS-100 is turned off. The point is to prevent accidental button-pushing when the WS-100 is in your pocket or when you are handling it during recording. In the picture, the Hold button is down.

The Power button (also on back) turns the WS-100 on and off. After a period of inactivity, the WS-100 will automatically turn itself off to save battery life (but never when you are recording).



The RECORD button

The first time you press the RECORD button, the device starts recording. If you press it again, it pauses the recording (it will beep twice and display 'PAUSED' on the LCD display). If you press RECORD again (third time), it will continue recording into the same file.

If you press the RECORD button and then press the STOP button, it will close the file. The next time you press the RECORD button, it will start recording in a new file.

