



**Directions for  
Wireless  
Multimedia  
Presenter with  
Trackball**

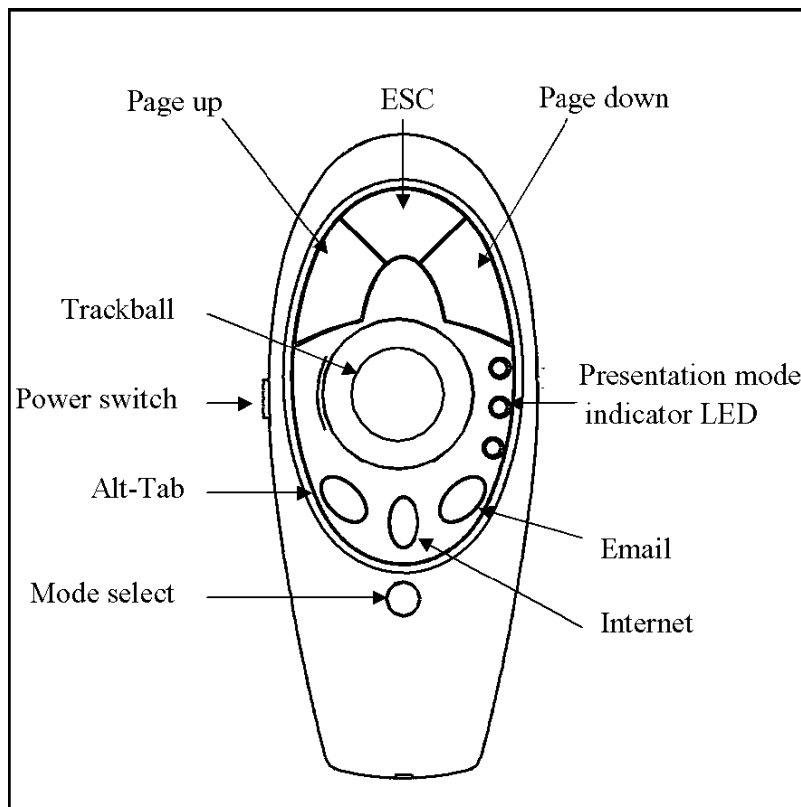


- Turn the power switch located on the side of the presenter to the “On” position
- Plug the USB receiver into an available USB port on your computer.
- The presenter’s default setting is Mouse mode. To change modes, press the Mode select button. The mode indicator LED illuminates to indicate the mode you are currently in:


- Green LED - Mouse mode
- Red LED - Presentation mode
- Yellow LED - Multimedia mode

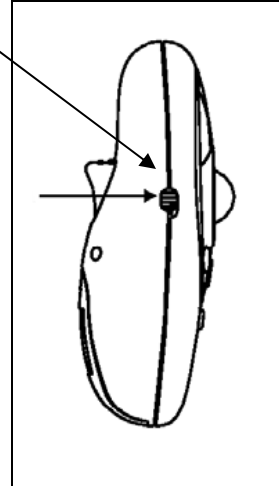


**Presenter Mode**

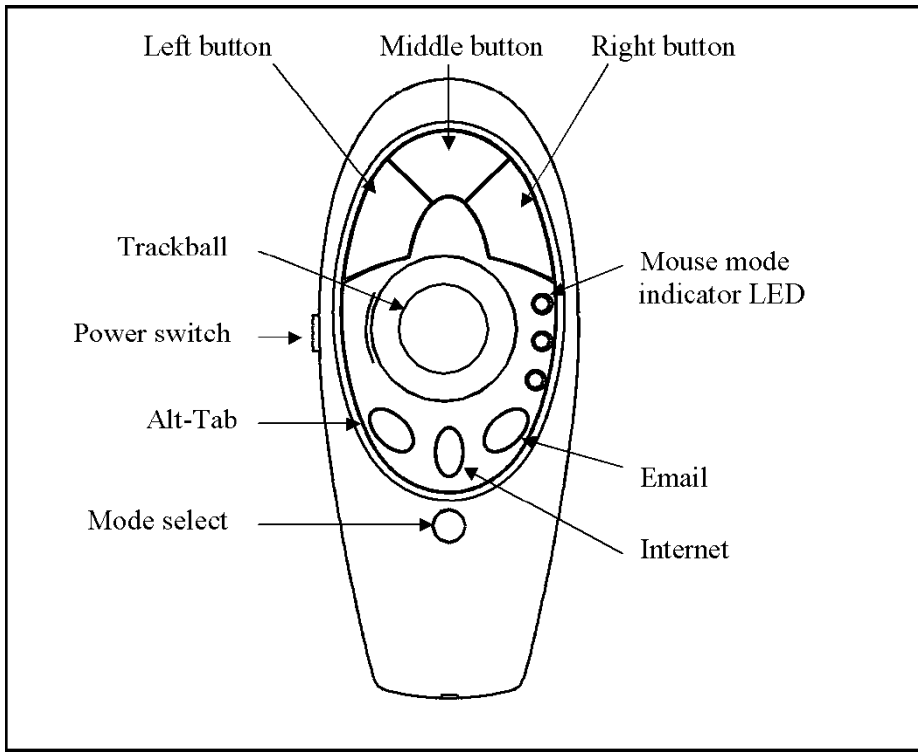

**Mouse Mode**

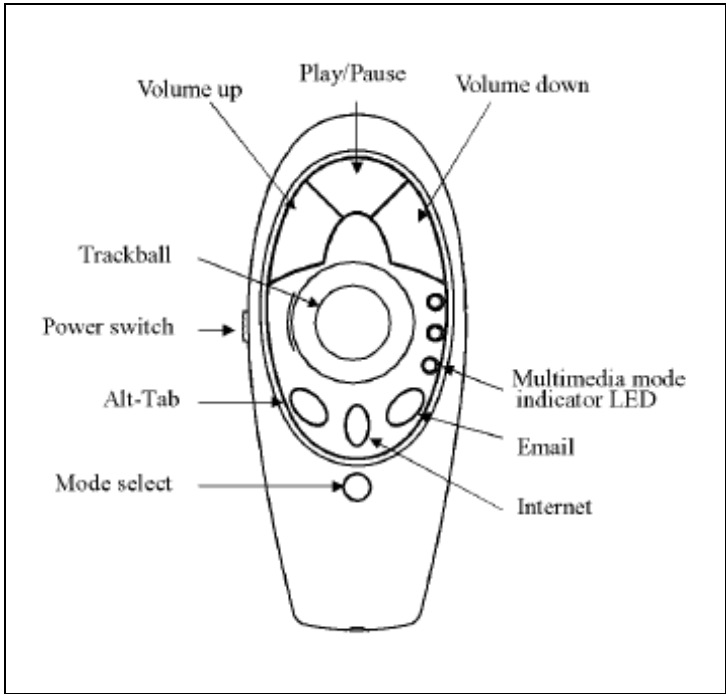

**Multimedia Mode 1**

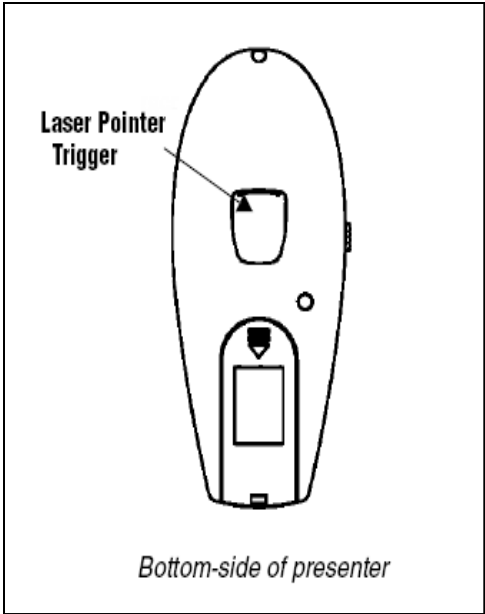

*Bottom-side of presenter*